


NOTES:

1. ALL JOINTS FROM MAIN TO HYDRANT SHALL BE RESTRAINED.
2. PROTECT BOLTS AND THREADS FROM CONCRETE.
3. IN UNPAVED AREAS SET CONCRETE COLLAR 1" ABOVE THE FINISHED GROUND. IN PAVED AREAS SET THE CONCRETE COLLAR FLUSH WITH THE EXISTING PAVEMENT.

FIRE HYDRANT FOR STANDARD BURY MAINS

STANDARD
CONSTRUCTION
DETAILS

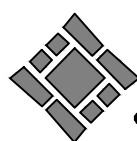

CITY OF
savannah

WATER RESOURCES AND PUBLIC WORKS BUREAU
Planning & Engineering

SCALE: N.T.S.

DATED: SEP 2013

PLATE NUMBER:

W36